



CM18001

DOME

TABLE SMALL, LARGE - PC1349, PC1350



Download

COMPONENTS INCLUDED WITH UNIT:

- 1× assembled light
- 1× Ehmann dimmer
- 1× hex key size 8
- 1× wrench size 7
- 1× cotton gloves
- 1× installation manual

WARNING:

The manufacturer assumes no liability for damage resulting from incorrect assembly.

When unpacking the light, do so with regard for its material composition – the main components are made of glass.

Wear the cotton gloves included with the light when unpacking and assembling it.

TAKE EXTRA CARE WHEN MOVING THE LIGHT. THE LIGHT MUST BE SUPPORTED FROM BENEATH AT ALL TIMES AND MUST NEVER BE PICKED UP BY THE TOP RING ONLY. THE MANUFACTURER WILL NOT ACCEPT DAMAGE CLAIMS ARISING FROM INCORRECT HANDLING.

Installation time: 10 minutes / 1 person



BROKIS®

BROKIS S.R.O.
ŠPANELOVA 1315/25
163 00 PRAHA 6 - ŘEPY
CZECH REPUBLIC

ORG. ID 64940799
VAT ID CZ64940799
C 42174 MĚSTSKÝ SOUD
V PRAZE

TEL +420 567 211 517
TECHNICAL@BROKIS.CZ
INFO@BROKIS.CZ
WWW.BROKIS.CZ



CLEANING THE GLASS

BROKIS upholds only the highest possible quality standards. Prior to shipping, the light undergoes several quality controls and stages of cleaning. Because transportation, storage, and the amount of time that passes between packing at our plant and subsequent unpacking by the client can affect the light in different ways, we strongly recommend cleaning it prior to assembly.

The glass must first be rinsed in warm water, and a dish detergent may be used to remove all foreign particles, dust, and grease. Repeat the process if necessary and then dry the glass thoroughly with a paper towel.


Recommendation: Do not use mineral spirits, highly concentrated thinners, or other substances not intended for use on glass surfaces. Do not use any cleaning agents containing silicone, as they may leave a film and attract dust and smudges.

PRIOR TO SHIPPING, THE FUNCTIONALITY OF EACH LIGHT AND ITS COMPONENTS IS THOROUGHLY TESTED. THE MANUFACTURER ASSUMES NO LIABILITY FOR THE MISHANDLING OF PRODUCTS.



1. SWITCHING ON THE LIGHT


Plug the power cable into an electrical outlet and ensure the light works properly.

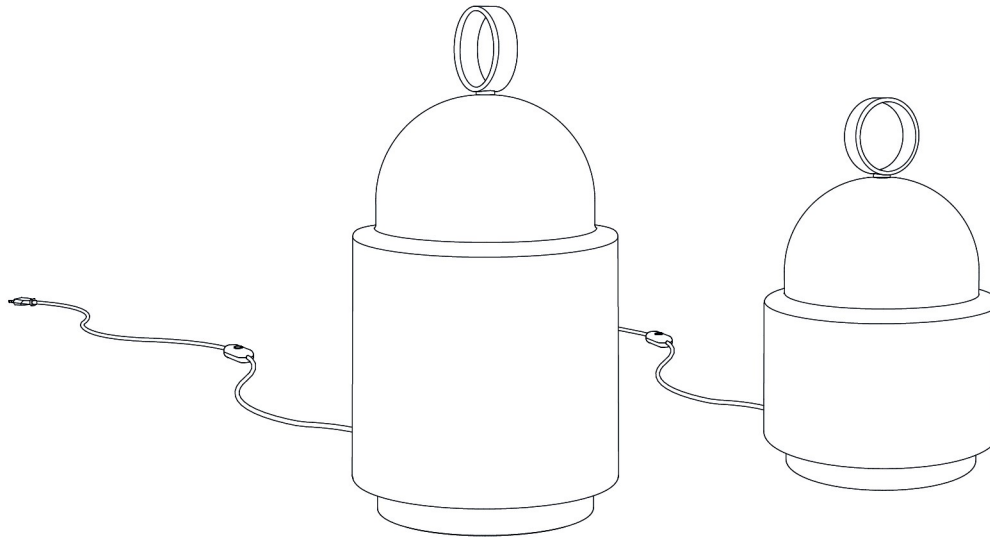

2. CLEANING/DIASSEMBLING AND REMOVING THE GLASS 1/3


Always unplug the light before cleaning the internal parts.

Place the light on a soft surface to prevent damage to the glass. Use the size 8 hex key to remove the screw in the bottom of the light. Next, lift up the metal cover. Put the screw back in the hole and turn it three or four times. You can now use the screw to hold the heat sink with light source in an upright position.

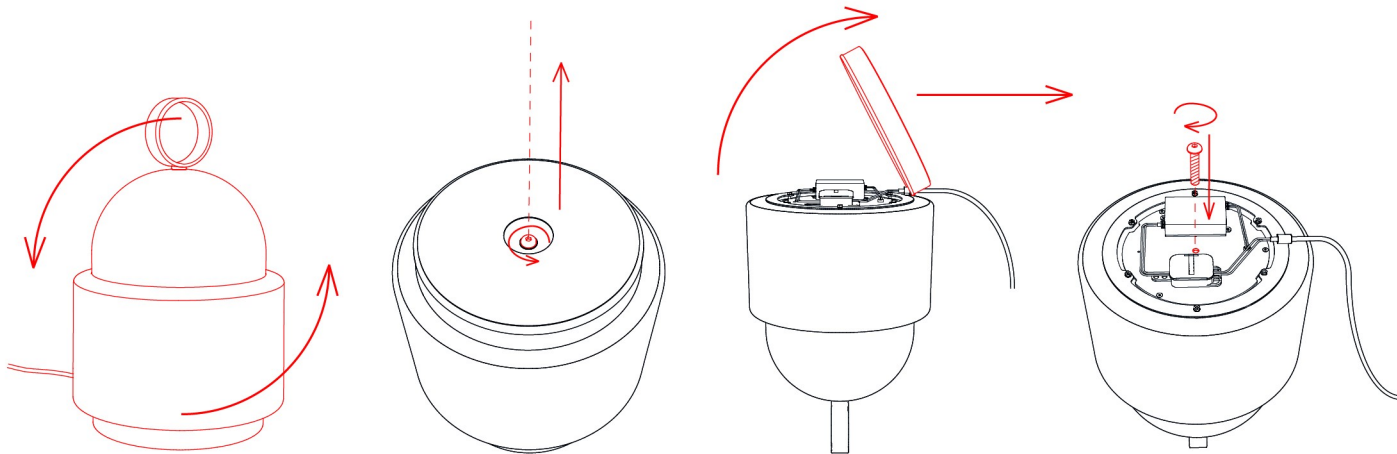

3. CLEANING/DIASSEMBLING AND REMOVING THE GLASS 2/3

Using a wrench unscrew the M4 nuts from around the heat sink and remove the stainless steel ring. Do not let go of the centre screw. Doing so may result in damage!

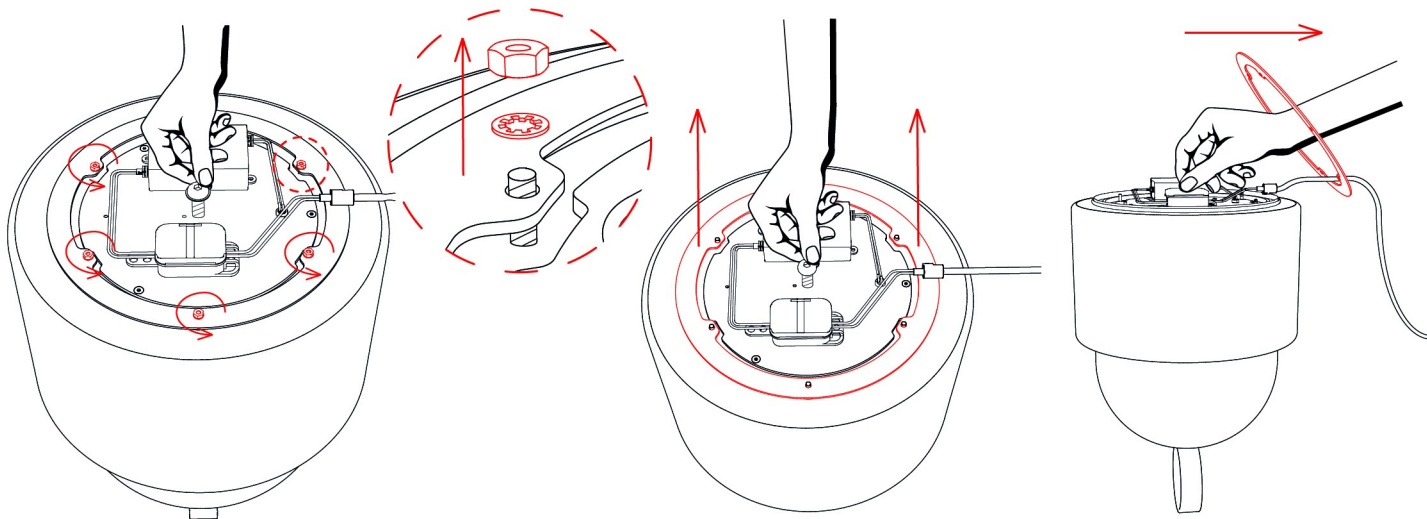

4. CLEANING/DIASSEMBLING AND REMOVING THE GLASS 3/3

Lower the released light source into the glass shade, turn 90 degrees until vertical, and then gently pull it up through the cutouts in the rim of the glass shade.

After cleaning the glass, reassemble the light by reversing the above steps.

