

# STRANGE PETIT 2.0

27 - Sep-2019

## 2.0 LED

**LED** 2x6W | 350mA | COB 3-step | excl. power supply

CE IP20 10.3m 31° 25°/25° 355°

white texture	163261W
black texture	163261B

### LIGHT COLOUR



2700K   >90CRI   2x460lm   18V	3
3000K   >90CRI   2x490lm   18V	5
1800-2700K   >95CRI   2x330lm   15V	9

### ALWAYS USE


plastic plaster kit	
white	90017203
black	90017204
aluminium plaster kit	
aluminium	90017205

Please see our catalogue for power supplies

plaster kit (has to be ordered separately)





90017205




or

90017203 / 90017204

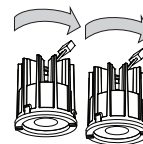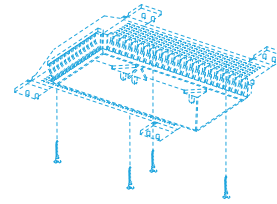

## DIMENSIONS

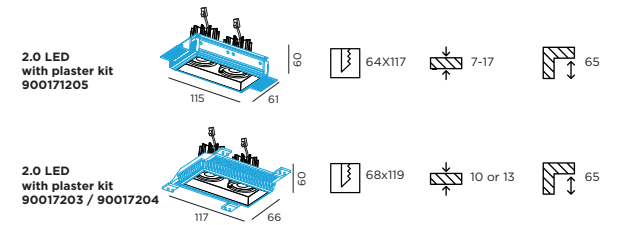


## MOUNTING INSTRUCTION

- ① Make a hole in the ceiling according to the prescribed dimensions. The plaster kit is always needed.
- ② Insert the plaster kit through the ceiling hole under an angle. Fix the plaster kit with screws through the ceiling plates aiming in the perforated area. Plaster the borders seamlessly.

## POWER CONNECTION

- ③ SERIAL CONNECTION - for LED

Always use a power supply according to the specifications of the LED module.



- ④ Insert the housing in the installed plaster kit and lock the LED module into the housing by a quarter turn.

# STRANGE PETIT 2.0 PLASTER KIT


27 - Sep-2019

plastic plaster kit


white  
black

90017203  
90017204


plaster kit (has to be ordered separately)

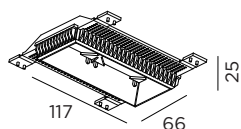

Note: there are 4 flexible legs on the plaster kit.

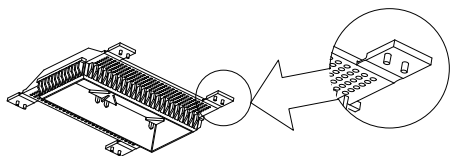

When the plaster board thickness is 13mm,  
the legs can be left opened.

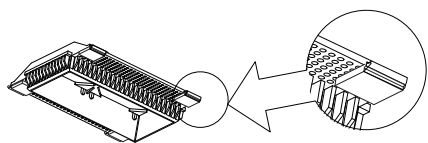

When the plaster board thickness is 10mm,  
the legs have to be folded.

