
MATCH POINT TRIMLESS

INSTALLATION INSTRUCTIONS | MAY 2023





DIMENSIONS

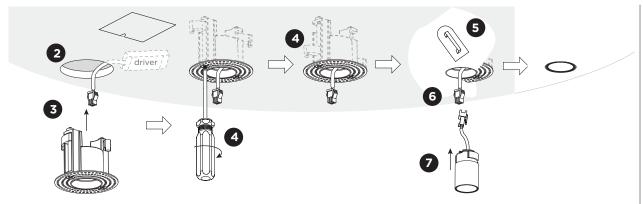

MOUNTING INSTRUCTION

- Remove the LED module from the plasterkit.
- Make a hole in the ceiling according to the prescribed dimensions.
- Insert the plasterkit in the hole.
- 4 Tighten both screws. The plasterkit will clamp itself into the ceiling.
- Plaster and paint the surface.
- 6 POWER CONNECTION
 Always use a driver according to the specifications of the LED module.




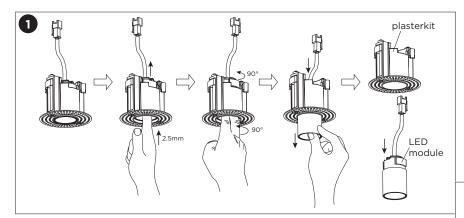




Driver must be powered off before connecting cables.

Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.









7 Click the fixture into the plasterkit hole.



MATCH POINT TRIMLESS

INSTALLATION INSTRUCTIONS | MAY 2023

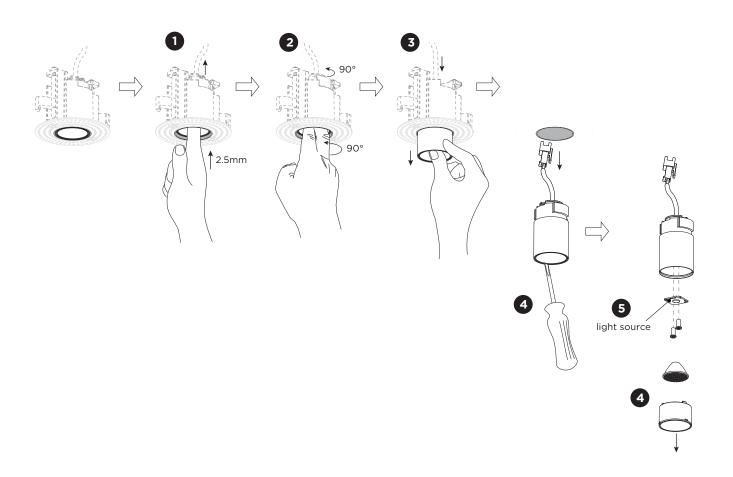



- Push the light source combination block up a little bit.
- Then rotate it 90° counterclockwise.
- Take out the light source combination block.
- Take out the snoot with any convenient tooland remove the lens.
- Remove the screws and take out the light source.



The light source is replaceable by an authorized professional. For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class E.